


## RX 9211

Dwugwinty z gwintem metrycznym i do drewna

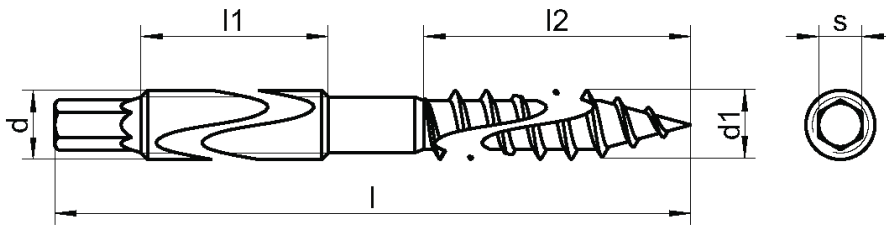

d	l	l1	l2	d1	s	⬡
M10	180	100	60	10	7	17
M10	200	110	70	10	7	17
M10	250	130	80	10	7	17
M10	300	140	100	10	7	17
M10	350	150	120	10	7	17
M12	180	100	60	12	8	19
M12	180	100	60	12	9	19
M12	200	110	70	12	8	19
M12	200	110	70	12	9	19
M12	250	130	100	12	8	19
M12	250	130	100	12	9	19
M12	300	140	100	12	8	19
M12	300	140	100	12	9	19
M12	350	180	180	12	8	19
M12	350	180	180	12	9	19

Materiał	Opakowanie
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50
A2	50